



- a H (色调 /Hue)
b S(饱和度 /Saturation)
c I(亮度 /Intensity)

HSI模式 HSI mode

- 按下“参数选择 & 调整拨盘”选择 H(色调) 或 S(饱和度)、I(亮度)；
 - 上下拨动“参数选择 & 调整拨盘”调整所选参数。
- Press "Parameter Selection & Adjustment Dial" to select H (Hue) or S (Saturation), I (Intensity);
 - Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.



- a R (红 /red)
b G (绿 /green)
c B (蓝 /blue)

RGB模式 RGB mode

- 按下“参数选择 & 调整拨盘”选择 R(红)、G(绿)、B(蓝)；
 - 上下拨动“参数选择 & 调整拨盘”调整所选参数。
- Press the "parameter selection & adjustment dial" to select R (red), G (green), B (blue);
 - Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.



- a LEE编号
LEE Color Code
b 亮度
Brightness

LEE色纸模式 LEE mode

- 按下“参数选择 & 调整拨盘”选择 LEE 色纸编号、灯光亮度；
 - 上下拨动“参数选择 & 调整拨盘”调整所选参数。
- Press "parameter selection & adjustment dial" to select LEE color code and light brightness;
 - Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.



- a ROSCO编号
Rosco Color Code
b 亮度
Brightness

ROSCO模式 ROSCO mode

- 按下“参数选择 & 调整拨盘”选择 ROSCO 色纸编号、灯光亮度；
 - 上下拨动“参数选择 & 调整拨盘”调整所选参数。
- Press "parameter selection & adjustment dial" to select ROSCO color code and light brightness;
 - Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.

 
产品参数 / Product Specifications

输出功率 Wattage	5W	色温 CCT	2500K-9000K	显色度 CRI	96
照射角度 Beam Angle	5600K: 58°	调光 Dimming	0-100%	工作电压 Volt	5V2A - 5V3A
电池容量 Battery	3.7V 2600mAh	机身尺寸 Dimensions	100x71x18mm	重量 Weight	132g
续航时间 Runtime	CCT: 5500k Brightness: 100% ≤90分钟/Minute (全功率 full power)				
灯泡数及功率 LEDS	24pcs x 0.5W<白White> / 24pcs x 0.5W<黄Yellow> / 12pcs x 0.5W<彩色RGB>				
照度 LUX	2500K: 0.3m 1690 / 0.5m 537 / 1m 124 / 2m 35 5500K: 0.3m 1900 / 0.5m 612 / 1m 145 / 2m 39				
英尺烛光 Footcandles	2500K: 0.3m 157 / 0.5m 49 / 1m 11 / 2m 3 5500K: 0.3m 176 / 0.5m 56 / 1m 13 / 2m 3				
兼容性 Compatibility	USB充电口: 5V2A-5V3A / USB充电口为type-c usb USB charging port:5V2A-5V3A / Type-c USB charging port				



DESAL Lite

灯光无线控制app Lighting Remote Control APP



POCKELITE®

F7 mini

RGB LED Light

说明书 Manual

使用前请先细阅读此说明书；请检查产品是否完整及无任何配件遗漏；切勿尝试自行拆开产品进行维修，如需维修请联系专业电工、供应商；本手册描述的产品及附件和功能仅供参考，我司保留修改本手册中信息权利。

Please read this manual before using the light and follow the instructions. Make sure that the product is intact and that there are no missing parts. Do not open or repair the unit yourself. If there is any defect, please contact an experienced technician.

产品保修卡 (维修联) Warranty Card (For staff)

日期 Date	维修部门 Department	维修人员 Staff
故障现象 Fault conditions		

产品保修卡 (用户联) Warranty Card (For user)

客户名称 name	产品型号 Model
购买日期 Date of purchase	联系电话 Tel
客户地址 address	

保修须知 / Warranty Notice

保修期内，用户需保修时，请填写本卡随保修产品一并寄到指定保修点保修，保修是以下情况之一不属于免费保修的范围：

1. 超过保修期 (由购买日起, 产品保修一年) ；
2. 用户自行拆卸，机器结构有人为损坏的；
3. 用户维修或使用不当 (如受潮、外力撞击、充电电压过高过低环境、过热过冷、入水等) 而引起的损坏或故障的；
4. 随机配件不予以保修。

If the user needs to maintain the product during warranty period, please fill out this warranty card and send the product (along with warranty card) to the assigned service point.


The situations below will not be considered in the warranty.

1. The warranty period is expired. (One year warranty, starting from the date of purchase)
2. Any damage or loss caused by man-made and unauthorized repair or modification.
3. Any damage caused by misuse. (E.g. using the light in humid, overheat or frozen environment; impact; high voltage charging and inflow of any liquid etc.)
4. Accessories are not covered by the warranty.

物品清单 / List of items

F7 mini	x1	怪手支架 Bracket	x1	冷靴底座 Cold-Shoe	x1	蜂巢罩 Honeycomb Grid	x1
柔光罩 Diffusor	x1	收纳包 Pouch	x1	说明书/保修卡 Manual	x1	USB充电线 USB Charging cable	x1

产品示意说明 / Product Overview

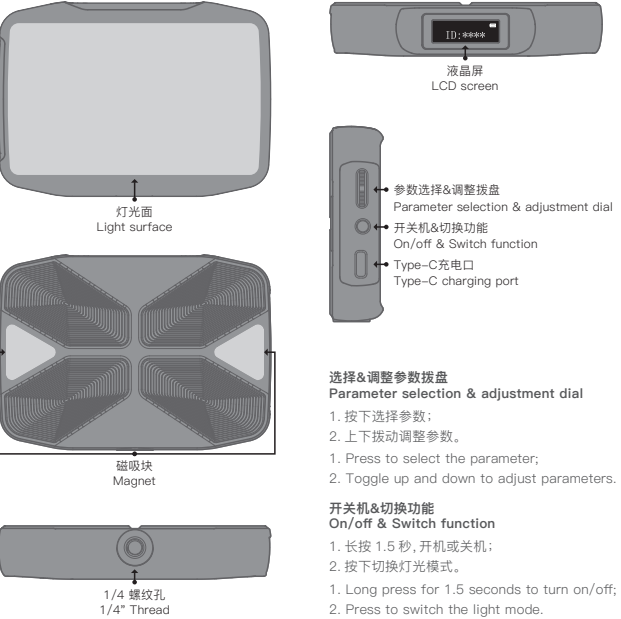

- 选择&调整参数拨盘**
Parameter selection & adjustment dial
1. 按下选择参数；
 2. 上下拨动调整参数。
1. Press to select the parameter;
2. Toggle up and down to adjust parameters.

- 开关机&切换功能**
On/off & Switch function
1. 长按 1.5 秒, 开机或关机；
 2. 按下切换灯光模式。
1. Long press for 1.5 seconds to turn on/off;
2. Press to switch the light mode.



灯具蓝牙ID Lamp Bluetooth ID

1. 每台灯具都有唯一的蓝牙 ID 编号, 以便在 app 连接灯具时识别。
1. Each lamp has a unique Bluetooth ID number so that it can be identified when the app is connected to the lamp.



蓝牙重置 Bluetooth reset

1. 拨动“参数选择 & 调整拨盘”显示“YES”，即重置灯具与 app 的蓝牙连接。
1. Turn the "parameter selection & adjustment dial" to "YES" to reset the Bluetooth connection between the lamp and the app.



CCT色温模式 Color Temperature Mode

1. 按下“参数选择 & 调整拨盘”选择调整色温、亮度；
 2. 上下拨动“参数选择 & 调整拨盘”调整所选参数。
1. Press the "parameter selection & adjustment dial" to select and adjust the color temperature and brightness;
2. Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.



SCENE灯效模式 Scene mode

1. 按下“参数选择 & 调整拨盘”选择灯效场景、灯效速度、灯光亮度；
 2. 上下拨动“参数选择 & 调整拨盘”调整所选参数。
1. Press the "parameter selection & adjustment dial" to select light scene effect, light effect speed, light brightness;
2. Turn the "parameter selection & adjustment dial" up and down to adjust the selected parameter.

